



## FHD Driving Recorder

E2280GW

## User Manual



Questions?  
Need some help?  
This manual will help you  
enjoy your new product.



If you still have questions,  
call our help line:  
1-877-456-6055



or visit us at:  
[www.polaroid.co](http://www.polaroid.co)

# Contents

About this Guide .....	4
FCC Statement .....	4
Prohibition of co-location .....	5
Important note .....	5
WEEE Notice.....	5
CE Regulatory Notice .....	5
Battery warning.....	6
Notes on Installation .....	6
Caution.....	6
<b>1 Introduction .....</b>	<b>9</b>
1.1 Features .....	9
1.2 Package Contents.....	9
1.3 Product Overview.....	9
<b>2 Getting Started .....</b>	<b>11</b>
2.1 Inserting the Memory Card.....	11
2.2 Installing in Vehicles.....	12
2.2.1 Mount to Windshield .....	12
2.2.2 Adjust the device position .....	13
2.3 Connecting to Power .....	14
2.4 LED Indicator .....	15
2.5 Powering the Device On / Off .....	16
2.5.1 Auto Power On/Off .....	16
2.5.2 Manual Power On/Off and Reset .....	16
2.5.2.1 Manual Power On.....	16
2.5.2.2 Power Off .....	16
2.5.2.3 Reset the device.....	16
2.6 Initial Settings .....	17
2.6.1 Set Automatic Record.....	17

2.6.2	Set the Date / Time.....	18
2.7	Application .....	19
2.7.1	Application installation .....	19
2.7.2	Wi-Fi connecting.....	19
<b>3</b>	<b>Using the Car Recorder .....</b>	<b>21</b>
3.1	Recording Videos.....	21
3.1.1	Record videos while driving .....	21
3.1.2	Emergency Recording .....	21
3.1.3	The Recording Screen.....	22
3.1.4	Add speed point .....	24
3.1.5	Taking Snapshot.....	24
3.1.6	4 GRID FUNCTION CHART in the LCD screen ...	25
3.2	Driving Safety .....	26
3.2.1	LDWS (Lane Departure Warning Systems)..	26
3.2.2	FCWS (Forward Collision Warning System) ..	28
3.2.3	FCMD (Front Car Move Detection) .....	30
3.2.4	Headlight Warning .....	32
3.2.5	Speed Cam Alert .....	33
3.2.6	Speed Limit Alert .....	34
3.2.7	Driver Fatigue Alert.....	35
3.2.8	Parking Mode .....	36
3.2.9	Collision Detection.....	38
3.2.10	ACC/DEC Alert.....	39
3.2.11	Driving Behavior .....	40
3.3	Playing Videos and Viewing Pictures.....	42
3.3.1	Playing Videos and Emergency Recording ..	42
3.3.2	Viewing Pictures.....	43
3.3.3	The Playback Screen .....	44
3.3.4	Deleting Files.....	46
<b>4</b>	<b>Adjusting the Settings .....</b>	<b>47</b>
4.1	Using the Menu.....	47

4.2	Menu Items .....	48
<b>5</b>	<b>Installing the Software .....</b>	<b>54</b>
<b>6</b>	<b>SuperCar .....</b>	<b>55</b>
<b>7</b>	<b>Specifications.....</b>	<b>56</b>

## About this Guide

The content in this document is for information purpose and is subject to change without prior notice. We made every effort to ensure that this User Guide is accurate and complete.

However, no liability is assumed for any errors and omissions that may have occurred.

The manufacturer reserves the right to change the technical specifications without prior notice.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Contains FCC ID: 2ACFIWM7911B

## Prohibition of co-location

This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

## Important note

Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. To maintain compliance with FCC exposure compliance requirements, please follow the operating instructions as documented in this manual.

## WEEE Notice

### Disposal of Waste Electrical and Electronic Equipment and/or Battery by users in private households in the European Union



WEEE



Battery

This symbol on the product or on the packaging indicates that this cannot be disposed of as a household waste. You must dispose of your waste equipment and/or battery by handling it over to the applicable take-back scheme for the recycling of electrical and electronic equipment and/or battery. For more information about recycling of this equipment and/or battery, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.

## CE Regulatory Notice

The product herewith complies with the requirements of the Low Voltage Directive 2014/35/EU, the EMC Directive 2014/30/EU, the Battery Directive 2006/66/EC, the R&TTE Directive 1999/5/EC and the RoHS Directive 2011/65/EC.

EU Health Protection: This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This product will meet the Basic Restriction limits of 1999/519/EC.

## Battery warning

- ❖ Always charge using the provided system. Improper handling of the battery may result in explosion.
- ❖ Never dismantle or pierce the battery or allow the battery to short-circuit.
- ❖ Keep the battery out of reach of children.
- ❖ Batteries may explode if exposed to naked fire. Never dispose of batteries in a fire.
- ❖ **Never replace the battery on your own; have the dealer do it for you.**
- ❖ Disposed of used batteries observing local regulations.

## Notes on Installation

1. This product shall be installed near the rear view mirror, at the center and top of windshield for optimal viewing.
2. Make sure that the lens is within the wiping range of the windscreen wiper to ensure a clear view even when it rains.
3. Do not touch the lens with your fingers. Finger grease may be left on the lens and will result in unclear videos or snapshots. Clean the lens on a regular basis.
4. Do not install the device on a tinted window. Doing so may damage the tint film.
5. Make sure that the installation position is not hindered by the tinted window.
6. To use the products of the attached power charger only, please do not use other brand power charger, in order to avoid equipment burn or cause the battery explosion.

## Caution

- ❖ Due to local laws and vehicles safety considerations, do not operate the device while driving.
- ❖ Set up time and date accurately before you use this device.
- ❖ Please use SuperCar software in condition that Google Maps is function normally.
- ❖ The firmware function in the device is for reference only, please follow the actual road condition.

- ❖ The results of GPS positioning are only for reference, and should not affect the actual driving situation. The system also cannot ensure the positioning accuracy.
- ❖ GPS positioning accuracy may differ depending on weather and location such as high buildings, tunnels, undergrounds, or forests.  
GPS satellite signals cannot pass through solid materials (except glass). Tinted window will also affect the performance of the GPS satellite reception.
- ❖ GPS reception performance on each device may differ. The system cannot determine the accuracy of the positioning results from different devices.
- ❖ The values displayed in this system, such as speed, position, and the distance warning to the speed camera set points, may be inaccurate due to the influence of surrounding environment. They are for your reference only.
- ❖ The system is used only for non-commercial use, within the maximum limits permitted by applicable law. Our company does not accept any responsibility for any data loss during the operation.
- ❖ Wi-Fi Signals are unable to pass through the building. The upper limit of signal transmission is 10m.
- ❖ Wi-Fi Operation Channels List: Ch1~Ch11.
- ❖ The product employs wireless data communication which may interfere, or be interfered by, a near-by device.
- ❖ Never use this device in the vicinity of a microwave oven or at places where there is radio interference.
- ❖ Radio wave reception may be worsened in specific environments.
- ❖ Please be advised that if another device is also using the same 2.4GHz band as this product, the processing speed of both devices may slow down.
- ❖ This device gets warm when in use; this is normal.
- ❖ Improper use or operation of the product may result in damage of the product or its accessories and void the warranty.

- ❖ The radio frequency (RF) generated by this RF electronic device may cause adverse effects on the operation of other electronic devices and result in malfunctioning. Wireless transmitters and circuitry may also interfere with other electronic devices. Therefore, do observe the following precautions:
  - Aircraft: Never use a radio transmitter when you are in an airplane. Please switch off the Wi-Fi function of the device.
  - Vehicle: The radio frequency transmitted by this device may affect the electronic system in a motorized vehicle. Please consult the manufacturer or dealer of your vehicle on the possible effect.
  - Pacemaker: In order to prevent any potential interference to a pacemaker, anyone who uses a pacemaker should be advised, that, when using this device, a minimum distance of 15cm (6 inch) should be kept between the device and the pacemaker; and never put this device in a chest pocket. In case of any doubt of interference, switch off the device immediately.
  - Medical Device: If you use a personal medical device, consult the device manufacturer or your physician to confirm if your device is sufficiently shielded from the RF transmission of this device.
  - Medical Facilities: Hospitals and medical institutes may use facilities that are sensitive to an external RF energy. Observe such instructions when the medical care personnel or any posted sign requests you to switch off any device that may interfere the radio frequency.
  - Explosion sites or any location with a posted sign: In order to prevent interfering with an explosion activity, observe all the signage and instructions in the Explosion Area or in a zone with a “Switch Off 2-way Radios” sign by switching off devices that may interfere with the radio frequency.

**Before you start using the system, it is assumed that you agree to the above statement.**

# 1 Introduction

Thank you for purchasing this advanced Car Recorder. This device is specifically designed for real time video and audio recording when driving.


## 1.1 Features

- Full HD recording videos (1920x1080@30fps or 1280x720@60fps)
- 2.7" LCD color touch screen
- Wide angle lens
- Multifunction traffic safety reminder
- Automatic Emergency recording for collision detection
- Support SDHC Level 6 and above. Support up to 32GB

## 1.2 Package Contents

The package contains the following items. In case there is any missing or damaged item, contact your dealer immediately.

Car Recorder

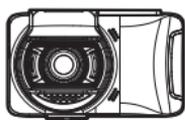

3M Mount



CD-ROM



Quick start guide



Warranty Card




Car adapter




## 1.3 Product Overview


Top and Bottom Views

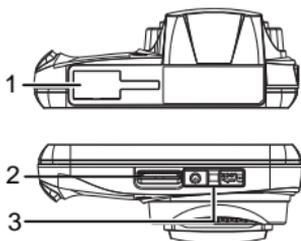


Side (Left and Right) Views

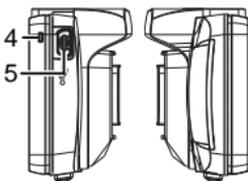

Front View

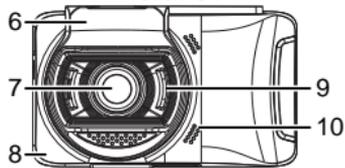

Rear View

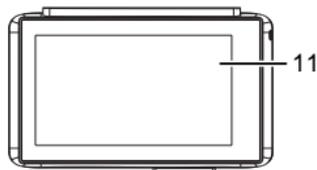


No.	Item
1	Mount Socket
2	Memory Card Slot
3	Power Switch
4	LED Indicator
5	USB / Power Connector
6	GPS Antenna

No.	Item
7	Wide Angle Lens
8	Wi-Fi Transmission Antenna
9	Speaker
10	Microphone
11	LCD Touch Panel

## 2 Getting Started

### 2.1 Inserting the Memory Card

Insert memory card with the pins upward and the screen of the device facing upward too, as illustrated. Push the memory card in until a click sound is heard, indicating the card is in position.

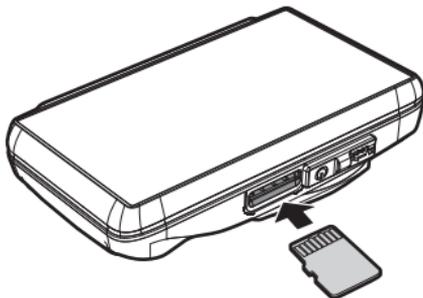

#### To remove the memory card

Push to eject the memory card out of the slot.


**Note:**

1. Do not remove or insert the memory card when the device is turned on. This may damage the memory card.
2. Please use a Class 6 or higher rating microSD card, max. up to 32GB.
3. Please format the microSD cards before the initial use.
4. When removing the memory card, be careful that the card may spring out and get lost. The memory slot has this spring-out feature for easy removal of the card.


## 2.2 Installing in Vehicles

### 2.2.1 Mount to Windshield


1. Push the mount into mount slot on top of device, until a click sound is heard.

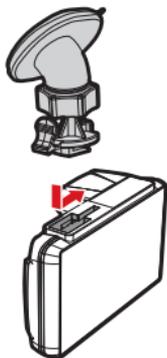

2. Peel off the protective plastic sheet from the adhesive bracket.

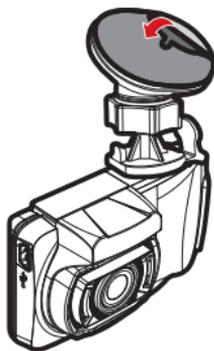


3. Place and press down the bracket firmly onto your windshield. Make sure the base is securely locked in place.

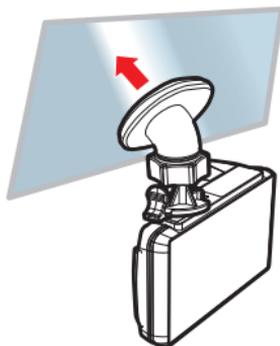

## 2.2.2 Adjust the device position

1. Loosen the knob to swivel the device vertically or horizontally.

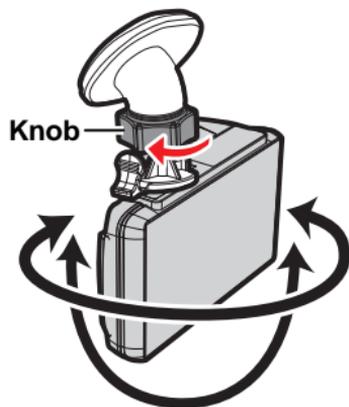


2. Then tighten the knob to make sure the device is securely locked in place.


## 2.3 Connecting to Power

Use only the attached power connector for activating the device and charging the built-in battery.

1. Connect one end of power connector to USB/Power connector port on the device. USB port input: DC 5V / 1A.

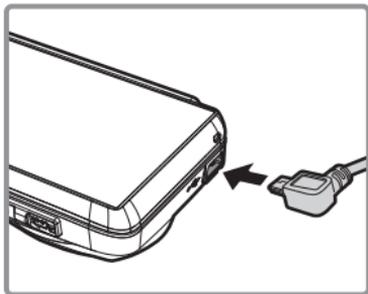

2. Plug the other end of the car adapter to the cigarette lighter socket of your vehicle. Once the vehicle engine is started, the device automatically turns on. Car charger input: DC 12 / 24V.

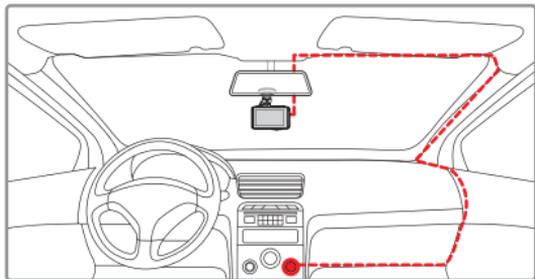

### Note:

1. This product shall be installed near the rear view mirror, at the center and top of windshield for optimal viewing.
2. This product contains functions such as **LDWS (Lane Departure Warning Systems)** (3.2.1) · **FCWS (Forward Collision Warning System)** (3.2.2) and **FCMD (Front Car Move Detection)** (3.2.3). Please refer to the alignment measures given in the individual sections during their installation for improved accuracy.
3. Please connect your product to an external power source for operation, otherwise its LCD touch screen may fail to operate properly.

## Battery Status Indicator:

Icon	Description
	Full battery power.
	2/3 battery power.
	1/3 battery power.
	Out of battery power.
	Battery is charging.
	Connect the car adapter to charge the battery, battery is fully charged.

### Note:

Please take note if the environment temperature reaches 45°C or above, the car adapter can still supply power to device, but it will not charge the Lithium-ion battery. This is the characteristic of Lithium-ion and is not a malfunction.

## 2.4 LED Indicator

Status Explanation	LED Indicator Color
Power off, battery charging	Red
Power off, battery full charged	LED light off.
Power on, battery charging	Red
Power on, battery full charged	Green
Standby / Standby and screen off	Green
Recording/ Recording and screen off	Flash red

## 2.5 Powering the Device On / Off

### 2.5.1 Auto Power On/Off


Once the vehicle engine is started, the device automatically turns on. If the **Automatic Record** function is enabled, the recording will automatically start right after the device turns on.

Please refer to **Set Automatic Record** (2.6.1).

### 2.5.2 Manual Power On/Off and Reset


#### 2.5.2.1 Manual Power On

Push the **power switch** and make sure that the power switch locks on the memory card slot.

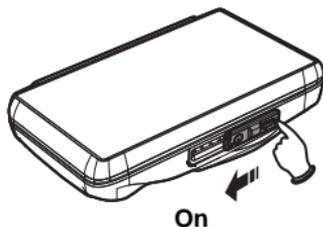

#### 2.5.2.2 Power Off

Push the **power switch** and make sure that the memory slot is released and the device starts power off sequence. Do not power on the device when it is in the power-off sequence, or the recorded file may become corrupt.

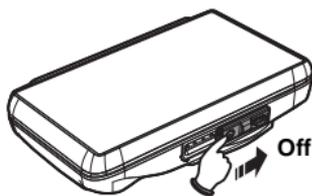

#### 2.5.2.3 Reset the device

In case the device fails to function normally due to unknown causes, push the **power switch** and verify the memory card is in the removable state; wait for 7 seconds and push the power switch again to restart the device.


## 2.6 Initial Settings

Before using the device, we recommend you to enable the **Automatic Record** function and set up the correct **Date and Time**.

### 2.6.1 Set Automatic Record

Default setting of Automatic Record is Enabled. The device will automatically start recording when powered on. In case Automatic Record is disabled, enable it by the following steps:

1. Touch  to enter Main Menu.
2. Touch  to switchover to **Record** Main Menu.
3. Touch  /  to select  for entering **Automatic Record** function menu; touch again to select **ON**.

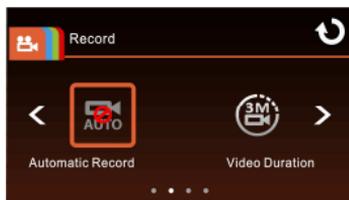


4. Touch  to return to Record screen.

## 2.6.2 Set the Date / Time


To set the correct date and time, do the following:

1. Touch  to enter Main Menu.

2. In  **System** main menu, touch  /  to select  for **Set Timezone** menu, touch  /  to set the current time zone; then touch  again to complete setting.

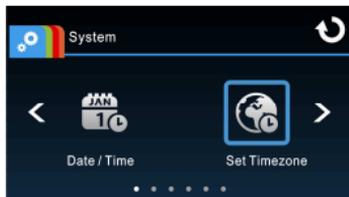

3. Select  to enter **Date / Time** menu. Touch  /  to select value; touch  /  to select previous or next field; confirm by touching  to complete setting.

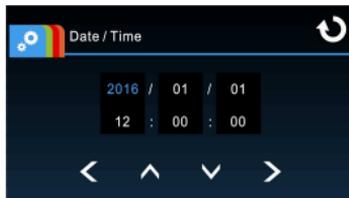

### Note:

1. If **Time Sync.** is on, device clock will be calibrated via satellite clock signal based on **Set Timezone**. Please refer to **Time Sync.** (4.2)
2. If satellite positioning is not successful, device clock will run based on user defined time.
3. Please be aware that touching  during the recording process will stop the recording process and enter into main menu. Please make sure the recording can be stopped before operating menu selections.

## 2.7 Application

The camera allows you to connect to your mobile devices via the App. When using for the first time, install the **Life Cam** App for your mobile device.

### 2.7.1 Application installation




1. Search from Google Play or App Store for Life Cam application.
2. Install the App.

**APP Layout and Features may be changed subject to different software versions. Please refer to Google Play or APP Store for update.**

### 2.7.2 Wi-Fi connecting

1. Touch  to enter Main Menu.
2. Touch  to switch over to **System** Main Menu.
3. Touch  /  to select  for entering **Wi-Fi** function menu; wait for screen to display device ID and Wi-Fi password.

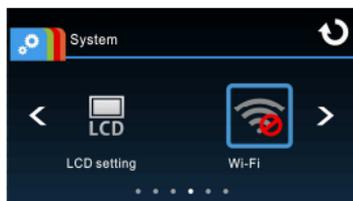

**Note:**

Wi-Fi function is dependent on the model purchased.

Device ID  
Wi-Fi password



- Using Wi-Fi function of a mobile device, search for device ID from the list and select and enter Wi-Fi Password.

**For iOS / Android Users:**

Using the mobile device [Settings] → [Wi-Fi] → [Select device ID no.: E280GWXXXXXX] → [Enter the password] → [Connecting]

- Execute the **Life Cam**  App.
- To disconnect Wi-Fi link, just exit **Life Cam**  Application.

**Note:**

- Make sure the Wi-Fi function of the equipment is activated and the mobile device is receiving Wi-Fi signal before executing the Life Cam App, or the App will be exited.
- The mobile device shall be within a maximum of a 10m distance from the equipment without any buildings in between.
- When the Wi-Fi function of the equipment is activated for 3 minutes without connecting with your mobile device, or the connection is disconnected, the equipment will automatically stop the Wi-Fi function and you will need to re-activate the Wi-Fi function.
- We suggest that you should set the correct date and time for your mobile device before using the equipment, so that the recorded video will be consistent with the date and time settings of the mobile device.
- When linking up with a mobile device, touch-control of device screen is no longer effective. Perform operations via the Life Cam Application. For operating the device again, you need to exit the Life Cam Application first. To operate the device, please quit the Life Cam program, and restart.
- The language of the Life Cam App will be consistent with that of your mobile device, it shall be the default language if it is not the built-in one.

## 3 Using the Car Recorder

### 3.1 Recording Videos

#### 3.1.1 Record videos while driving

When the vehicle engine starts up and the **Automatic Record** function is enabled, the device automatically turns on and starts recording.

The touch panel function is not ready yet within 2 seconds upon the **Auto Recording** start.

Recording will automatically stop when the engine is switched off, or touch  to stop recording manually.

#### Note:

1. On some cars, the recording will continue when the engine is switched off. If this happens, please manually turn off the cigarette lighter or remove the car adapter from the cigarette lighter.
2. It can be configured to save a video file for every 3 or 5 minutes of recording. Please refer to **Video Duration** (4.2).
3. The device saves the recording in the memory card. If the memory card capacity is full, the oldest file in the memory card is overwritten.

#### 3.1.2 Emergency Recording

Start the Emergency Recording, do the following:

1. During video recording, touch



to enter emergency recording mode, the “Emergency” message will be shown immediately on the lower left corner of the screen, and the recorded file will be protected.



2. Touch  again, to halt the recording.

**Note:**

1. If the **Collision Detection** function is enabled and a collision is detected, the device will automatically trigger the emergency recording. Please refer to **Collision Detection** (4.2).
2. The emergency recording file is created as a new file, which will be protected to avoid being overwritten by normal cycling recording. 8G (or above) memory card can save up to 10 emergency video files. The alert message of "**Emergency files are full**" will pop up on the screen when the emergency recording files are full, and the oldest emergency file will be automatically deleted when a new emergency recording file is created.

### 3.1.3 The Recording Screen



No.	Icon	Item	Description
1		Recording Icon	Indicates the recording status.
2		Date / Time	Indicates the current recording date and time.
3		Add speed point	Touch  to add a speed cam point.
4		Menu	Touch  to enter the main menu.

5		Taking Snapshot	While recording, touch  to take a photo.
6	00:00:10	Recording Duration	Indicates the video current duration.
7		Satellite positioning icon	The  icon appears on the screen when satellite positioning of the device is ready.
8		Battery	Indicates the remaining battery power.
9		4 GRID FUNCTION CHART in the LCD screen	Touch  to enter the 4 GRID FUNCTION CHART in the LCD screen. Please refer to <b>4 GRID FUNCTION CHART in the LCD screen</b> (3.1.6).
10		Recording	Touch  to start recording, touch  again to halt the recording.
11		Emergency Recording	During video recording, touch  to enter emergency recording mode. Please refer to <b>Emergency Recording</b> (3.1.2).

### 3.1.4 Add speed point

You may customize speed cam positions in this product.

1. Press  to add new speed cam position during recording.
2. You can add new custom speed cam positions after GPS positioning. You can add up to 200 of them.
3. This product features a capacity of 200 speed cam positions. In case you are trying to add more than that the system prompts with message "**Speed Position is full**".

**Note:**

You may delete custom speed cam positions by selecting the **Delete speed point** option from the **File / Position** menu. Please note that all of your existing speed cam positions are deleted once the **Delete speed point** option is selected. Make sure you are ready to recreate your custom speed cam positions before running this option.

### 3.1.5 Taking Snapshot

You can also use this device to take snapshots of the current scene.

1. Press  in recording mode to take a snapshot.
2. A snapshot is taken when this  icon appears at center of screen.



**Note:**

The definition of photos taken by this product when it is recording and the car is moving is subject to the speed of the target object and changes in ambient lighting. The photograph function is better used for taking still pictures in accident scenes or when the car is stopped to wait for a traffic light.

### 3.1.6 4 GRID FUNCTION CHART in the LCD screen

Please touch  when you are recording, then you can see the 4 GRID FUNCTION CHART in the LCD screen.

Touch any point of the screen to return to Record Screen.



No.	Item
1	Driving Speed
2	Time

No.	Item
3	Driving direction
4	Speed Cam Alert

**Note:**

Driving Speed, Driving Direction and Speed Cam Alert are only applicable when satellite positioning of the device is ready; otherwise, they will be displayed in gray scale only. Satellite positioning function is dependent on the model purchased.

## 3.2 Driving Safety

**The following driving safety function is for reference only. Drivers are advised to exercise discretion based on actual road conditions.**

### Note:

1. The **Driving Safety** function is limited to triggering no more than two alarms at the same time. If a voice and alert message have been triggered, any other alarm will be ignored until either of the two is settled.
2. Satellite positioning must be completed before functions such as LDWS, FCWS, FCMD, Speed Cam Alert, Speed Limit Alert, ACC/DEC Alert, and Driving Behavior to be enabled. Be sure to check that Satellite positioning has been completed prior to using the product. Satellite positioning is dependent on the model purchased.
3. The **Driving Safety** functions such as LDWS, FCWS, FCMD, Speed Cam Alert, Speed Limit Alert, ACC/DEC Alert and Driving Behavior will be disabled, if the product doesn't connect with the external power supply.
4. The detections of LDWS, FCWS and FCMD may be inaccurate when used in rain, at night or in environments of insufficient lighting. Drivers are advised to exercise discretion based on actual road conditions.

### 3.2.1 LDWS (Lane Departure Warning Systems)

Once your car's location is determined by GPS and the **LDWS** function is enabled, this product produces voice and screen message alerts when you drive off of or change lanes at speeds over 50 km/h (31 mile/h).

To set the LDWS (Lane Departure Warning Systems), do the following:


1. Touch  to enter Main Menu.
2. Touch  to switchover to **Driving Safety** Main Menu.
3. Touch  /  to select  for entering **LDWS** function



menu, then touch  again to enable the function (**on**).



4. Touch  to return to record screen.
5. After enabling **LDWS**, the screen will display align icon , please adjust the camcorder so that the horizontal line and the eye level are overlapped and the slash lines are centered in the driving lane. Make sure that align icon will not be obscured (e.g. hood) during installation, it may cause misjudgment if the endpoint is obscured.

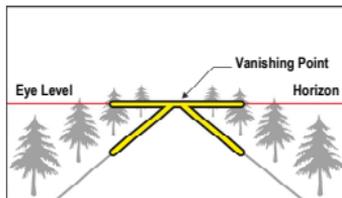

6. Once your car's location is determined by GPS, this product produces voice and screen message alerts when you drive off of or change lanes at speeds over 50 km/h (31 mile/h).



### 3.2.2 FCWS (Forward Collision Warning System)


Once your car's location is determined by GPS and the **FCWS** function is enabled, this product produces voice and screen message alerts when you drive at speeds over 60 km/h (37 mile/h) and are less than 20m away from the car in front of you.

To set the FCWS (Forward Collision Warning System), do the following:

1. Touch  to enter Main Menu.
2. Touch  to switchover to **Driving Safety** Main Menu.
3. Touch  /  to select  for entering **FCWS** function menu, then touch  again to enable the function (**on**).



4. Touch  to return to record screen.
5. After enabling **FCWS**, the screen will display align icon , please adjust the camcorder so that the horizontal line and the eye level are overlapped and the slash lines are centered in the driving lane. Make sure that align icon will not be obscured (e.g. hood) during installation, it may cause misjudgment if the endpoint is obscured.

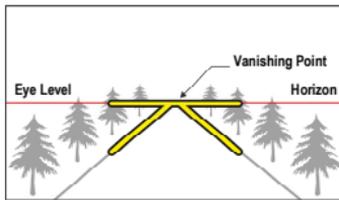

6. Once your car's location is determined by GPS, this product produces voice and screen message alerts when you drive at speeds over 60 km/h (37 mile/h) and are less than 20m away from the car in front of you.



### 3.2.3 FCMD (Front Car Move Detection)

Once your car's location is determined by GPS and the **FCMD** function is enabled, this product starts to detect the motion of cars in front of you after your car remains motionless for 20 seconds. It produces voice and screen message alerts when the movement of the car in front of you changes its images in the camera.

To set the FCMD (Front Car Move Detection), do the following:


1. Touch  to enter Main Menu.
2. Touch  to switchover to **Driving Safety** Main Menu.
3. Touch  /  to select  for entering **FCMD** function menu, then touch  again to enable the function (**on**).



4. Touch  to return to record screen.



5. After enabling **FCMD**, the screen will display align icon , please adjust the camcorder so that the horizontal line and the eye level are overlapped and the slash lines are centered in the driving lane. Make sure that align icon will not be obscured (e.g. hood) during installation, it may cause misjudgment if the endpoint is obscured.

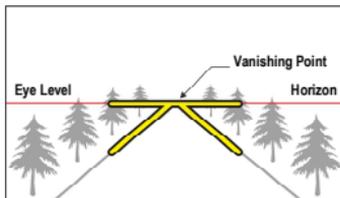

6. Once your car's location is determined by GPS, this product starts to detect the motion of the car in front of you after your car remains motionless for 20 seconds. It produces voice and screen message alerts when the movement of the car in front of you changes its images in the camera.



**Note:**

The product will recalibrate 30 seconds later after the initial alert if the **FCMD** function has been activated. If the vehicle remains in a stationary mode and the product detects image changes in the front lens, the product will once again trigger the voice and screen message alerts.

### 3.2.4 Headlight Warning

The **Headlight Warning** function produces voice and screen message alerts when it detects poor lighting conditions through the recording displays of this product, including driving in rainy or cloudy weather, at night, and in basements, parking lots, and tunnels.

To set the headlight warning, do the following:

1. Touch  to enter Main Menu.
2. Touch  to switchover to **Driving Safety** Main Menu.
3. Touch   to select  for entering **Headlight Warning** function menu, then touch  again to enable the function (**on**).



4. Touch  to return to record screen.
5. This product produces voice and screen message alerts when it detects poor lighting conditions through its recording displays.



### 3.2.5 Speed Cam Alert

The **Speed Cam Alert** function is enabled by default. Once your car's location is determined by GPS and approaches a speed cam, this product produces voice and screen message alerts.

To enable the disabled Speed Cam Alert function:


1. Touch  to enter Main Menu.

2. Touch  to switchover to **Driving Safety** Main Menu.

3. Touch  /  to select  for entering **Speed Cam Alert** function menu, then touch  again to enable the function (on).

4. Touch  to return to record screen.

5. Once your car's location is determined by GPS and approaches a speed cam, this product produces voice and screen message alerts. The alarm screen turns red to remind you to slow down if you are driving faster than the speed limit.

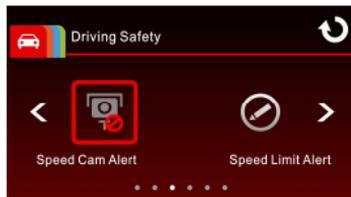

#### Note:

1. The speed cam prompt is disabled if this product is not connected to an external power source. It is automatically enabled once this product is turned on when connected to an external power source.
2. The speed cam alert function must have the speed cam datum from the country you use. The function will be void if the product are used in any others countries. Please consult with the shop you purchased if the function is void. The product never guarantee the speed cam datum will be included for the worldwide countries.

### 3.2.6 Speed Limit Alert

If the **Speed Limit Alert** function is enabled, this product produces voice message alerts once your car's location is determined by GPS and its running speed exceeds the set limit.

To set the Speed Limit Alert, do the following:

1. Touch  to enter Main Menu.

2. Touch  to switchover to **Driving Safety** Main Menu.

3. Touch  /  to select  for entering **Speed Limit Alert** menu.

4. Tap the  /  keys to set up a Speed Limit Alert to trigger this product's alarm (Off / 50 km/h ~ 200 km/h).



5. Touch  to return to record screen.

6. If a Speed Limit Alert is set, this product produces a voice message alert once your car's location is determined by GPS and its running speed exceeds the set limit.

### 3.2.7 Driver Fatigue Alert

If the **Driver Fatigue Alert** function is enabled, this product produces voice and screen message alerts one hour after it has begun recording and repeats the alerts every half an hour afterwards.

To set the driver fatigue alert, do the following:

1. Touch  to enter main menu.
2. Touch  to switch over to **Driving Safety** Main Menu.
3. Touch   to select  for entering **Driver Fatigue Alert** menu, then touch  again to activate (**on**).



4. Touch  to return to record screen.

### 3.2.8 Parking Mode

To monitor the vehicle when it is parked, you can activate **Motion Detection** or **Vibration Detection**.

Follow the steps below to change the settings for Parking Mode:

1. Touch  to enter main menu.
2. Touch  to switch over to **Driving Safety Main Menu**.
3. Touch  /  to select  for entering **Parking Mode** menu.
4. Touch  /  to configure Parking Mode (Off / Motion Detection / Vibration Detection).

- **Off:** No parking monitoring activated.
- **Motion Detection:** If disconnected from power when the device is powered on, the system alert message **“Wait for 10 seconds to enter Motion Detection, or touch screen to power off.”** will be displayed on the screen. This means the system will enter Motion Detection automatically in 10 seconds, when the device detects any motion in front of lens, Video Record will be activated for a duration the same as the length setting. If the screen is touched anywhere in 10 seconds, the device will be powered off instead of entering Motion Detection mode.
- **Vibration Detection:** If disconnected from power when the device is powered on, the system alert message **“Wait for 10 seconds to enter Vibration Detection or touch screen to power off.”** This means the system will enter Vibration Detection automatically in 10 seconds; when the device detects any external vibration (sensitivity approximately 48 mg) applied to the vehicle after three minutes when all passengers have alighted, Video Record will be activated



for a duration the same as the length setting and the recording will be protected. If the screen is touched anywhere in 10 seconds, the device will be powered off instead of entering Vibration Detection mode.

5. Touch  to return to record screen.

**Note:**

1. When the battery is fully charged and is in good condition, Motion Detection can record continuously for about 30 minutes.
2. As the device is used, the battery storage capacity will decrease gradually. This is a normal phenomenon for the battery.

### 3.2.9 Collision Detection

Sensitivity of the **Collision Detection** function is set to medium by default. This product begins emergency recording once it detects any vibrations caused by a collision. To change the settings of Collision Detection:

1. Touch  to enter main menu.

2. Touch  to switch over to **Driving Safety Main Menu**.

3. Touch   to select  for entering **Collision Detection** menu.

4. Tap the  /  keys to change the sensitivity of this product's collision detection (Off / Low Sensitivity / Normal Sensitivity / High Sensitivity).



5. Touch  to return to record screen.

#### Note:

The emergency recording file is created as a new file, which will be protected to avoid being overwritten by normal cycling recording. 8G (or above) memory card can save up to 10 emergency video files. The alert message of "**Emergency files are full**" will pop up on the screen when the emergency recording files are full, and the oldest emergency file will be automatically deleted when a new emergency recording file is created.


### 3.2.10 ACC/DEC Alert

This product produces voice and screen message alerts if the **ACC/DEC Alert** function is enabled and the car accelerates 20 km/h (12.4 mile/h) in one second when driving at speeds over 80 km/h (50 mile/h) or decelerates 30 km/h (18.6 mile/h) in one second when driving at speeds under 50 km/h (31 mile/h) after position is determined by GPS.

To set the ACC / DEC alert, do the following:

1. Touch  to enter Main Menu.
2. Touch  to switchover to **Driving Safety** Main Menu.
3. Touch  /  to select  for entering **ACC/DEC Alert**

function menu, then touch  again to enable the function **(on)**.

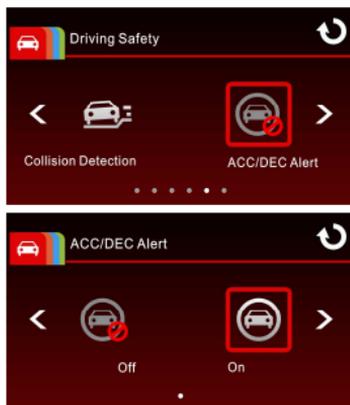

4. Touch  to return to record screen.
5. This product produces voice and screen message alerts once your car's location is determined by GPS and abruptly accelerates or decelerates.



## 3.2.11 Driving Behavior


This function analyzes the driver's behavior by giving ratings for five aspects of driving: speed, car move, break, lane change and safety distance. Drivers can use this feature as a reference to gauge their competence in appropriate driving behavior, passenger comfort and safety.

To see your driving behavior, follow the instructions below:

1. Touch  to enter main menu.
2. Touch  to switch over to **Driving Safety Main Menu**.
3. Touch  /  and select  to enter **Driving Behavior**.

The screen will display a radar chart of your driving behavior. Touch the screen anywhere again to display your ratings in stars (up to 5 stars for each item).

- **Speed:** analysis of the driver's stability in the control of vehicle speed. Higher score reflects higher stability in driving speed.
- **Car Move:** analysis of the driver's stability in the control of vehicle start. A higher score reflects higher stability in vehicle start.
- **Brake:** analysis of the driver's stability in the control of vehicle deceleration to a complete stop. A higher score reflects smoother control of the brake.
- **Lane Change:** analysis of the driver's frequency in lane changes within short periods of time. A higher score reflects lower frequency in lane changes.

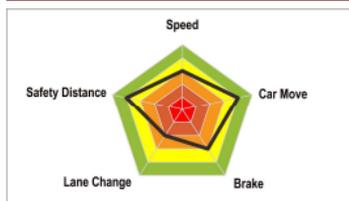

Item	Rating
Speed	★★★
Car Move	★★★★★
Brake	★★★★★
Lane Change	★★
Safety Distance	★★★★★



- **Safety Distance:** analysis of the safety distance between the vehicle and the front vehicle maintained by the driver. A higher score reflects higher safety.
4. Touch anywhere on the screen to return to **Driving Safety Main Menu**.
  5. Touch  to return to record screen.

## 3.3 Playing Videos and Viewing Pictures

### 3.3.1 Playing Videos and Emergency Recording

Playback video record files as follows:

1. Touch  to enter main menu.
2. Touch  to switch over to **File / Position** menu.
3. Touch  to enter **Video/ Emergency** function menu.

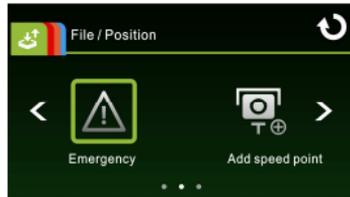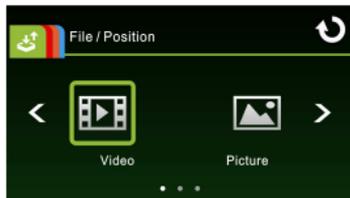

4. Touch   to browse for required video file, touch selected preview of video to enter Playback Mode




5. Touch  repetitively to return to Record Screen.

### 3.3.2 Viewing Pictures

View pictures as follows:

1. Touch  to enter Main Menu.
2. Touch  to switch over to **File / Position** main menu.
3. Touch  to enter **Picture** function menu.

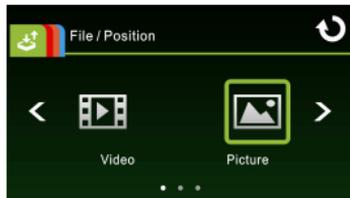


4. Touch   to browse for required picture files, touch selected preview of picture to enter Picture Playback Mode.



5. Touch  repetitively to return Record Screen.

### 3.3.3 The Playback Screen

Video Playback Screen

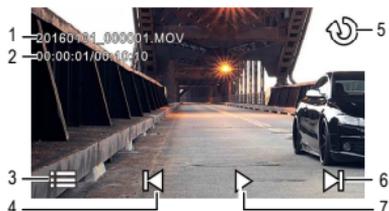

Picture Playback Screen





No.	Icon	Item	Description
1		File Name	Indicates name of current video or picture file.
2		Current Duration / Video Duration	Indicates time code and duration of current video file.
3		Menu	Touch  to enter <b>File Deletion</b> menu.
4		Fast Rewind / Previous File	<ul style="list-style-type: none"> <li>Touch  when video or picture is not in playback will switch over to the previous file.</li> <li>Touch  in video playback mode will reverse the playback.</li> </ul>
5		Return	Touch  to return to preview screen of video or picture. Touch  repetitively to return to record screen.

No.	Icon	Item	Description
6		Fast forward / Next File	<ul style="list-style-type: none"> <li>• Touch  when video or picture is not in playback will switch over to the next file.</li> <li>• Touch  in video playback mode will enable fast forward playing of video.</li> </ul>
7		Playback/ Pause	Touch  to play or pause the video.

### 3.3.4 Deleting Files

To delete file(s), do the following:

1. Touch  to enter Main Menu.
2. Touch  to switch over to **File / Position** main menu.
3. Touch  to enter **Video/Picture/Emergency** menu.
4. Touch   to browse for required video or picture file; touch selected preview image to enter **Video/Picture Playback Mode**.
5. Touch  to enter **File Deletion** menu, select   to delete one file or all files; touch   to confirm or cancel the selection.

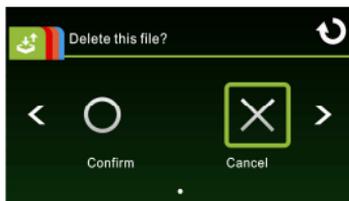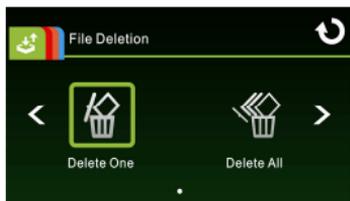

Item	Description
Delete One	Delete the current file.
Delete All	Delete all files.

6. Touch  repetitively to return to Record Screen.

**Note:**

Deleted files cannot be recovered. Ensure the files have backup before deletion.

## 4 Adjusting the Settings

### 4.1 Using the Menu

You can customize the general settings via the on-screen display (OSD) menus.



1. Touch  in the record mode will stop the record and enter into Main Menu.
2. Touch  /  /  /  to switch over main menus.
3. Touch  /  to browse for function items in the respective main menu; touch a function icon to enter setting screen.
4. On completion of setting a required function item, device will return automatically to the main menu of the selected function.
5. Touch  to return to Record Screen.

## 4.2 Menu Items

Refer to the below table for details of main menu and function list.

Main Menu	Function List	Description	Available Option
 System	 Date / Time	Set the date and time.	
	 Set Timezone	Set the time zone you are in.	UTC -12:00 ~ UTC +12:00
	 Time Sync.	When enabled, device clock will be calibrated automatically based on satellite clock of the set time zone on completion of satellite positioning.	On / Off
	 Beep	Enable/Disable the beep.	Off / Low / Medium / High
	 Language settings	Set the on-screen display menu language.	English / 繁體中文 / 简体中文 / Русский / Español / Deutsch / Français / Português / Italiano / 日本語 / العربية
	 Distance Unit	Select the unit for distance display.	KM / MILE
	 LCD setting	Set LCD off time. Device screen will be off after a set time if no operation is detected during the standby or record mode. Touch any point of the touch screen will switch it on. (Recording is not affected when screen is off).	On / Off After 30 sec. / Off After 3 min.
	 Wi-Fi	Set Wi-Fi linkage of a mobile device.	

Main Menu	Function List	Description	Available Option
	 Satellite System	Select satellite system of the locality.	GPS / GLONASS
	 Recorder Format	Format the memory card inserted in the equipment. All the files in the card will be erased.	Yes / No
	 Default Setting	Resume the equipment to its default setting.	Yes / No
	 Firmware Version	Indicates the current Firmware.	
 File / Position	 Video	Play / Delete a video file.	
	 Picture	Play / delete a picture file.	
	 Emergency	Play / delete an emergency record file.	
	 Add speed point	Manually add speed points after satellite positioning, up to 200 user defined speed points can be added.	
	 Delete speed point	Delete all the user defined speed points from system.	
 Driving Safety	 LDWS	Once your car's location is determined by GPS and the LDWS function is enabled, this product produces voice and screen message alerts when you drive off of or change lanes at speeds over 50 km/h (31 mile/h).	On / Off

Main Menu	Function List	Description	Available Option
	 <p data-bbox="322 288 391 314">FCWS</p>	<p data-bbox="459 165 699 438">When FCWS is activated after satellite positioning, device will issue a voice alert and an alarm image when vehicle speed is above 60 km/h (37 mile/h) and the distance with the front vehicle is less than 20m.</p>	<p data-bbox="733 288 814 314">On / Off</p>
	 <p data-bbox="322 637 391 663">FCMD</p>	<p data-bbox="459 451 699 856">Once your car's location is determined by GPS and the FCMD function is enabled, this product starts to detect the motion of cars in front of you after your car remains motionless for 20 seconds. It produces voice and screen message alerts when the movement of the car in front of you changes its images in the camera.</p>	<p data-bbox="733 637 814 663">On / Off</p>
	 <p data-bbox="311 947 405 1001">Headlight Warning</p>	<p data-bbox="459 870 699 1078">When Headlight is activated, device will issue a voice alert and an alarm screen reminding that insufficient brightness is sensed on the recording face.</p>	<p data-bbox="733 958 814 984">On / Off</p>
	 <p data-bbox="298 1158 415 1209">Speed Cam Alert</p>	<p data-bbox="459 1093 699 1278">If the Speed Cam Alert function is enabled, once your car's location is determined by GPS and approaches a speed cam, this product produces voice and screen message alerts.</p>	<p data-bbox="733 1170 814 1196">On / Off</p>

Main Menu	Function List	Description	Available Option
	 Speed Limit Alert	If the Speed Limit Alert function is enabled, this product produces voice message alerts once your car's location is determined by GPS and its running speed exceeds the set limit.	Off / 50 km/h ~ 200 km/h
	 Driver Fatigue Alert	If the Driver Fatigue Alert function is enabled, this product produces voice and screen message alerts one hour after it has begun recording and repeats the alerts every half an hour afterwards.	On / Off
	 Parking Mode	<p><b>Off:</b> No parking monitoring activated.</p> <p><b>Motion Detection :</b> If Motion Detection is activated, the device will automatically trigger recording when the device detects any motion in front. When the battery is fully charged and is in good condition, Motion Detection can record continuously for about 30 minutes.</p> <p><b>Vibration Detection:</b> If Vibration Detection is activated, the device will automatically trigger Emergency when the device detects any external vibration</p>	Off / Motion Detection / Vibration Detection

Main Menu	Function List	Description	Available Option
		applied on the vehicle after 3 minutes when all passengers have alighted from the vehicle.	
	 Collision Detection	If Collision Detection is activated, this product begins emergency recording once it detects any vibrations caused by a collision.	Off / Low Sensitivity / Normal Sensitivity / High Sensitivity
	 ACC/DEC Alert	This product produces voice and screen message alerts if the ACC/DEC Alert function is enabled and the car accelerates 20 km/h (12.4 mile/h) in one second when driving at speeds over 80 km/h (50 mile/h) or decelerates 30 km/h (18.6 mile/h) in one second when driving at speeds under 50 km/h (31 mile/h) after position is determined by GPS.	On / Off
	 Driving Behavior	Displays rating for the driver's performance in five aspects of driving behavior, namely: speed, car move, break, lane change and safety distance.	
 Record	 Resolution	Setting of video resolution.	FHD (1080P/30fps) / HD30 (720P/30fps) / HD60 (720P/60fps)

Main Menu	Function List	Description	Available Option
	 EV	Set the exposure compensation.	+2.0 ~ -2.0
	 Automatic Record	Setting for enabling Automatic Record after device power on.	On / Off
	 Video Duration	Save respective video files in a length of the selected duration.	3 min. / 5 min.
	 Voice Record	Setting for activating audio in the video.	On / Off
	 Time Stamp	Setting for the indication of date and time stamp on the picture or video recorded.	On / Off
	 WDR	The WDR function compensates for and optimizes dim areas in poor external lighting environments.	On / Off

**Note:**

The **Driving Safety** functions such as LDWS, FCWS, FCMD, Headlight warning, Speed Cam Alert, Speed Limit Alert, Driver Fatigue Alert, ACC/DEC Alert and Driving Behavior will be disabled, if the product doesn't connect with the external power supply.

## 5 Installing the Software


1. Place the attached CD ROM into the CD player.
2. If the CD does not execute automatically, please use Windows File Manager to execute the **Install\_CD.exe** file in the CD.

The following screen will be shown up.



3. Press the [Menu] item to start the installation process according to the instructions on-screen.

## 6 SuperCar

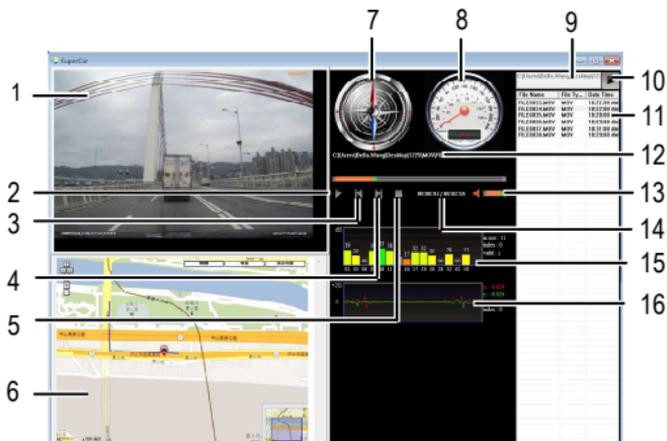

No.	Item
1	Video Player
2	Play / Pause
3	Previous
4	Next
5	Stop
6	Google Maps
7	Compass
8	Speed Meter

No.	Item
9	File Path
10	Browser File
11	File List
12	File Name
13	Volume
14	Current Duration / Total Duration
15	Signal Noise Ratio (SNR)
16	G-Sensor

### Note:

1. To display the route on Google Maps, please make sure the internet is connected before starting the video playback.
2. Video files (MOV / TS) and GPS/G-Sensor files (NMEA) must be stored in the same folder before starting the playback.
3. The SuperCar software is only applicable to a Windows operating system.

## 7 Specifications

Item	Description
Image sensor	1/2.7" CMOS sensor
Effective pixels	1920 (H) x 1080 (V)
Storage media	Support Micro SDHC Class 6, max. up to 32GB
LCD display	2.7" LCD color TFT touch screen
Lens	Wide Angle Fixed Focus lens F1.9, f=3.4mm
Focus range	1.5m~Infinity
Satellite System	GPS / GLONASS (Satellite Positioning feature varies depending on the model)
Wi-Fi	802.11 b/g/n (The wireless network feature varies depending on the model)
Movie Clip	Resolution: FHD (1080P/30fps); HD30 (720P/30fps); HD60 (720P/60fps)
	Format: MOV
Still image (Snapshot)	Resolution: 2M (1920 x 1080)
	Format: JPEG
Shutter	Electronic shutter Auto:1/2 ~1/2000 sec.
G-Sensor	3-Axis G-Force sensor
ISO	Auto
White Balance	Auto
Microphone	Yes

Item	Description
Speaker	Yes
Interface	Mini USB
Battery	Built-in 470mAh Li-polymer rechargeable
Operating Temperature	0° ~ 50° C
Operating Humidity	20 ~ 70% RH
Storage Temperature	-20° ~ 80° C
Dimensions	80 x 30.3 x 51.2 mm
Weight	Approx. 82g (without memory card)

Built-in IEEE 802.11 n Wi-Fi module: WN7911B-WM

Frequency range	2412~2462MHz
Channel List	Ch1~Ch11

Contains FCC ID: 2ACFIWM7911B

Copyright © 2016

All rights reserved.

*All other marks, products or company names mentioned in this guide are trademarks of their respective companies.*



**Questions?  
Need some help?**  
This manual will help you  
enjoy your new product.



If you still have questions,  
call our help line:  
**1-877-456-6055**



or visit us at:  
**[www.polaroid.com](http://www.polaroid.com)**