

## 2 Getting Started

### 2.1 Inserting the Memory Card

Insert memory card with the pins facing the screen of the device, as illustrated. Push the memory card until it clicks into place.



#### To remove the memory card

Push to eject the memory card out of the slot.

#### Note:

1. Do not remove or insert the memory card when the device is turned on. This may damage the memory card.
2. It is recommended to use a 32 GB, Class 10 speed or above microSD card.
3. It is recommended to format the microSD cards before the initial use.
4. 64 GB microSD card can also be used, but the cards must be formatted in the device before the initial use.

### 2.2 Installing in Vehicles

#### 2.2.1 Mount to Windshield

1. Attach the bracket to the device. Slide it into the bracket holder until you hear a click.
2. Connect to the vehicle power supply then power on to enter preview screen and confirm the field of view. Then clean the surface of the windshield with alcohol to ensure that the adhesive surface is clean.
3. Peel off the protective plastic sheet from the adhesive bracket.

 


- Place and press down the bracket firmly onto your windshield. Make sure the base is securely locked in place.



### 2.2.2 Adjust the device position


- Loose the knob to swivel the device vertically or horizontally.
- Then tighten the knob to make sure the device is securely locked in place.

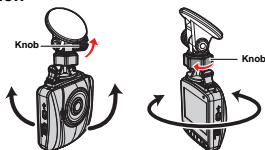


## 2.3 Connecting to Power

Use only the supplied car charger to power up the device and charge the built-in battery.

 - Connect one end of the car charger to the USB connector of the device. USB port input: DC 5V / 1A.

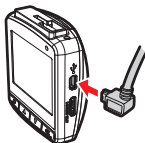

 - Plug the other end of the car adapter to the cigarette lighter socket of your vehicle. Once the vehicle engine is started, the device automatically turns on. Car charger input: DC 12 / 24V.

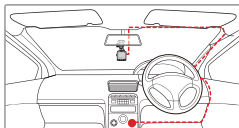


#### Note:

Please measure the front windshield viewing area, make sure not to block driver's front view, install the device below the rearview mirror (the central, higher right position of the front windshield).

## 2.4 Powering the Device On / Off and Reset


### 2.4.1 Power On

 Slide the Power Switch down to the ON position. This action will cover part of the memory card slot.

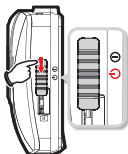

### 2.4.2 Power Off

 Slide the Power Switch up to the OFF position. Before taking out memory card, please wait until power-off sequence completed and the screen turn off. Do not take out memory card during power-off sequence to prevent recorded video loss or corruption.

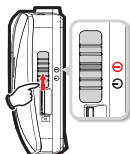




### 2.4.3 Reset the Device

In rare occasions, the device may experience an error for unknown reasons. In this case, please press **OK** button for at least 8 seconds to turn off the device.

## 2.5 The Recording Screen







 
No.	Item	Description
1	Voice Record	Indicates turn off voice record.
2	Duration	Indicates the recording duration of the current video file.

3	Date and time	Indicates the current recording date and time.
4	Guide icon (Menu)	Press the  button to enter the OSD menu.
5	Guide icon (Playback)	Press the  button to switch to Playback mode.
6	Resolution	FHD - 1080p (1920 x 1080) HD - 720p (1280 x 720)
7	Battery	Indicates the remaining battery power.
8	Guide icon (Snapshot)	Press the  button to take a snapshot during recording.
9	Guide icon (Emergency)	Press the <b>OK</b> button to enter and initiate emergency recording, and the recorded file will be protected.

## 2.6 Set the Date and Time

Before using the device, we recommend you to enable the Automatic Record function and set up the correct Date and Time.

1. Press the button to enter the OSD menu.
2. Press the / button to select Date / Time and press the **OK** button.
3. Press the / button to adjust the value and press the **OK** button to move to another field.
4. Repeat step 3 until the date and time setting is complete.

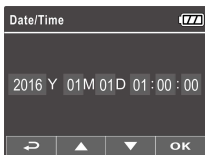

### Note:

To ensure the accuracy of the video file time, please reset the date and time when the battery power runs out or when not in use over 7 days.

## 2.7 Emergency Recording

During normal video recording, press the **OK** button to begin emergency recording mode. The “**Emergency**” message will be displayed immediately on the upper left corner of the screen, and the recorded file will be continuous and protected from being overwritten.

After complete the emergency recording, it will be back to normal recording mode.

 


### Note:

1. If the **Collision Detection** function is enabled and a collision is detected, the device will automatically trigger the emergency recording feature.
2. The emergency recording file is created as a new file, which will be protected to avoid being overwritten by normal loop recording. 8 GB (or above) memory card can save up to 10 emergency video files. The alert message of “**Emergency files are full**” will pop up on the screen when the emergency recording files are full, and the oldest emergency file will be automatically deleted when a new emergency recording file is created.

## 2.8 Playback Videos and Photos

1. During recording, press **▲** button to browse for the desired video and photo file.
2. Press the **▲/▼** button to select the file that you want to browse and press the **OK** button.
3. Press the **▲/▼** button to view the next or the previous file and press the **OK** button to view the file in full screen.
4. When user want to playback the emergency video file, they could check on file name as EMER.

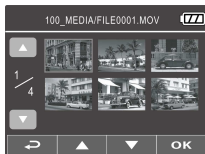

### 3 Caution

- ❖ Please do not disassemble or use any way to modify the product by yourself, which may corrupt the product or cause electric shock.
- ❖ Keep the product away from the reach of children or animals to prevent them from swallowing the batteries or small accessories.
- ❖ Stop using in case there is any kind of liquid or foreign object enters the product. Turn off the Driving Recorder and contact your dealer for help if it occurs.
- ❖ Do not operate the Driving Recorder with wet hands; it may cause electric shock.
- ❖ Never replace the battery on your own; have the dealer do it for you.
- ❖ This product shall be installed near the rear view-mirror, at the center of windshield, if possible, for optimal viewing.
- ❖ To use the products of the attached power charger only, please do not use other brand power charger, in order to avoid equipment burn or cause the battery explosion.
- ❖ Due to local laws and vehicles safety considerations, do not operate the device while driving.
- ❖ Set up time and date accurately before you use this device.
- ❖ The firmware function in the device is for reference only, please follow the actual road condition.
- ❖ The system is used only for non-commercial use, within the maximum limits permitted by applicable law. Our company does not accept any responsibility for any data loss during the operation.
- ❖ This product gets warm when in use; this is normal.
- ❖ Improper use or operation of the product may result in damage of the product or its accessories and void the warranty.
- ❖ We reserve the right to change any content or technical rule without prior notification.
- ❖ For more details about this device operation and trouble shooting, please read the User Manual located on the CD-ROM disc included with this product.

**For more operation details, please refer to CD-ROM.**